



INSTRUCTIONS FOR LAYING




1. Prepare all the tools and materials you need.

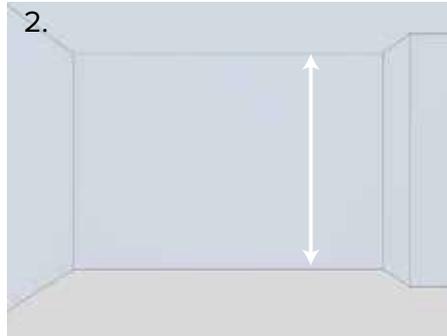


2. Measure the height of the wall.

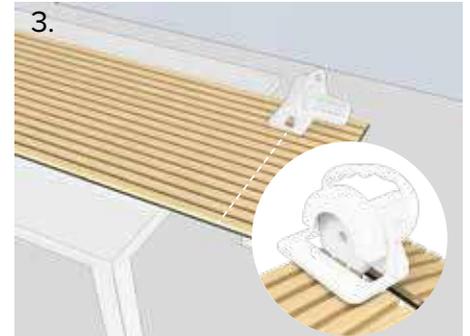

3. Cut the acoustic panel according to the height of the wall.

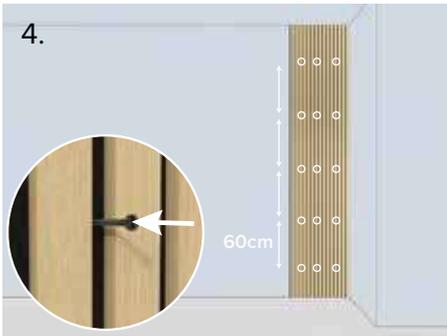


4. Place the acoustic panel on the wall and nail it.

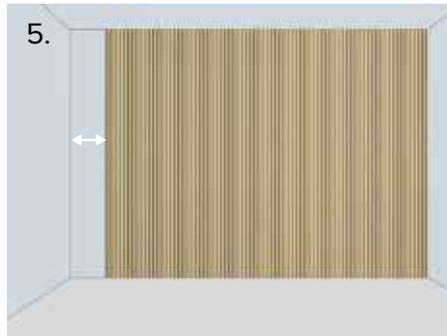


5. Install in turn. Measure the remaining width



6. Cut the acoustic panel into the remaining width.

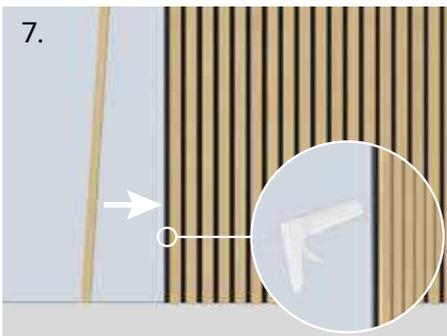

7. Use an edge strip at the edge. Glue the edge of the acoustic panel and stick the edge strip firmly at the gluing place.

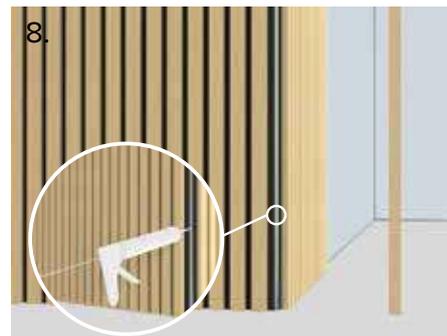

8. When dealing with external corner, use an edge strip too.



9. Complete the installation.



SOUND ABSORPTION CLASS

A Nail acoustic panels directly to the wall. Absorption Class



B Attach acoustic panels to the wall with nail-free glue.



C Install fibreglass wool or rock wool between the battens.



WARRANTY
5 YEARS

*faus.international

