KITCHEN INSTALLATION INSTRUCTIONS


GENERAL REQUIREMENTS

In addition to the general installation requirements, follow these specific instructions for kitchens.


1 ACCLIMATISE THE MATERIAL

Keep the flooring in the same ambient conditions as the rest of the home for 48 hours to allow it to acclimatise properly.

ACCLIMATISATION · 48 HOURS

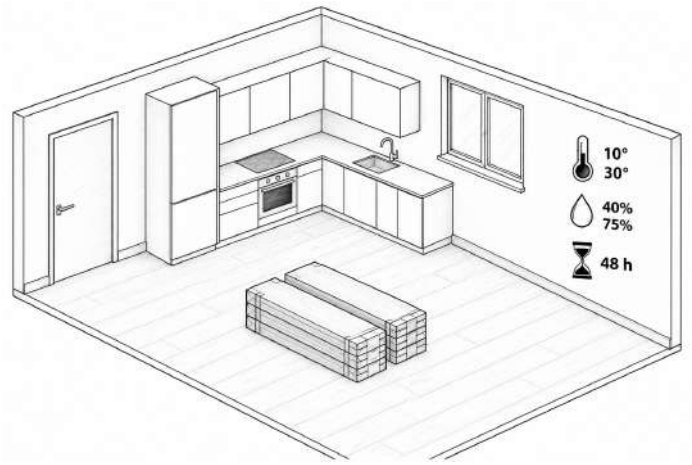

2 LEAVE A PERIMETER EXPANSION GAP

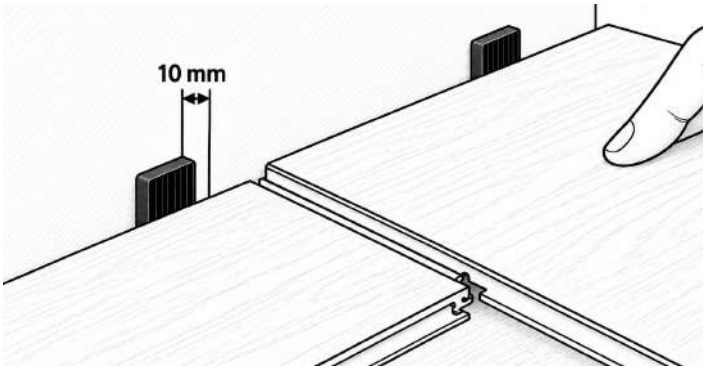


Always leave an expansion gap of at least 10 mm between the laminate flooring and the walls or any fixed elements.

PERIMETER EXPANSION GAP
≥ 10 mm

3 INSTALL CABINETS ON THE SUBFLOOR

Kitchen cabinets must not rest directly on the laminate flooring. Cabinet legs must stand on the subfloor. Cut the flooring around each leg, leaving a 10 mm clearance that will be concealed by the plinth.

DO NOT REST ON THE LAMINATE FLOORING

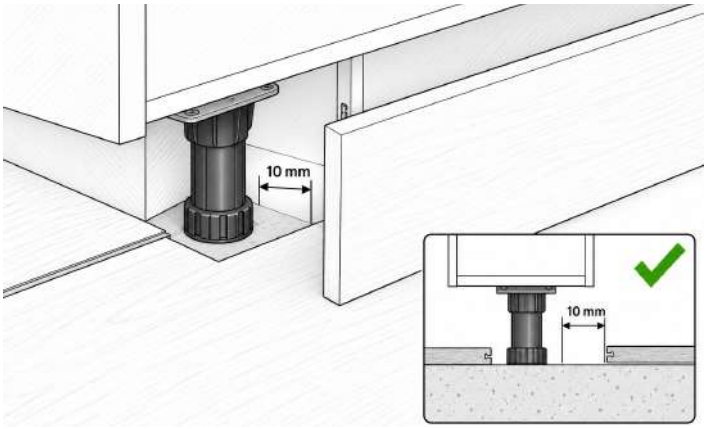


KITCHEN INSTALLATION INSTRUCTIONS

4 LEAVE A GAP AROUND KITCHEN ISLANDS

Install kitchen islands in the same way: supports must stand on the subfloor, and the laminate flooring must retain a perimeter expansion gap of at least 10 mm.


↔ PERIMETER EXPANSION GAP
≥ 10 mm

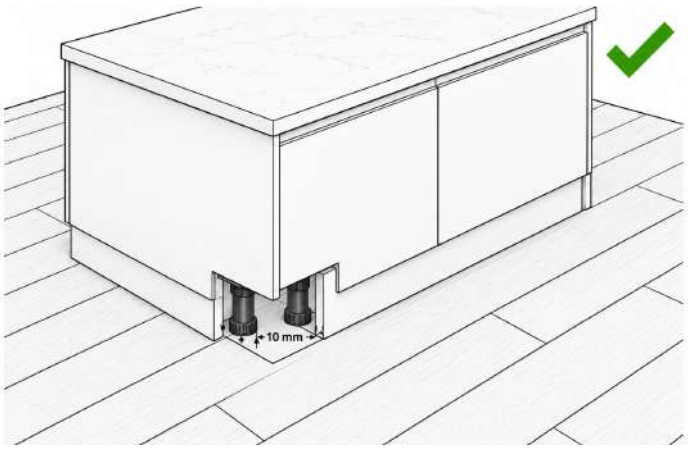


5 PROTECT JOINTS IN WET AREAS

Near sinks, laundry areas or other places where water may spill, apply ClicSeal to the profiled edges of each plank to improve joint protection.

APPLY CLICSEAL TO EACH PLANK

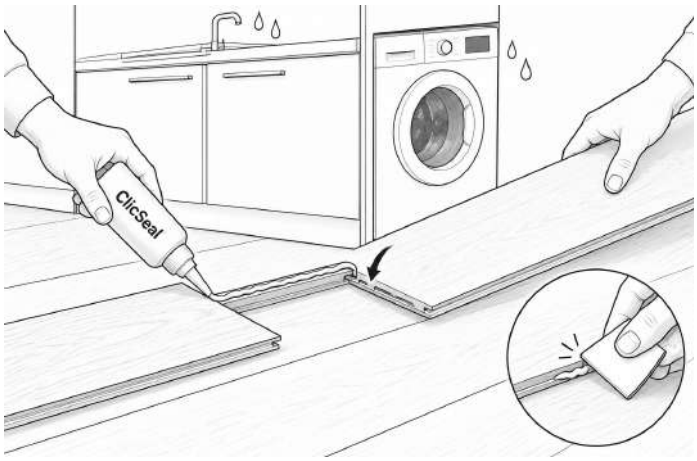

6 SEAL THE PERIMETER GAP

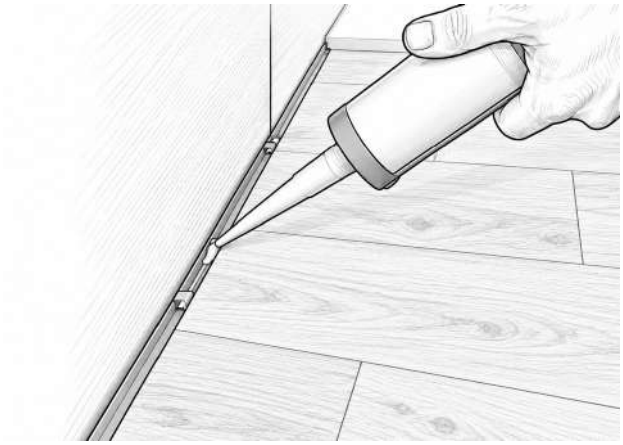

Apply neutral-cure flexible silicone sealant around the entire perimeter, especially in areas exposed to water, such as around kitchen cabinets and appliances (washing machine, sink and refrigerator), to protect the flooring from spills.

APPLY NEUTRAL-CURE FLEXIBLE SILICONE SEALANT AROUND THE ENTIRE PERIMETER