

WALL TEC ACCESORIES

INSTALLATION
GUIDELINES

FAUS
DECOR



- Ensure the wall moisture content does not exceed 7% before installation.
- Do not install the product in damp environments or near heat sources such as fireplaces or halogen lamps.
- Allow the panels to acclimatize in the installation area for 48 hours prior to installation.
- Do not install panels on freshly painted walls.
- Ensure the installation surface is flat, level, and stable.
- Panels can be installed either horizontally or vertically.
- Clean with a damp cloth only. Do not use abrasive cleaning products.


WALL TEC ACCESORIES INSTALLATION INSTRUCTIONS

FAUS
DECOR



1. Begin installation from the left side of the wall. Position the first panel 12 mm from the edge to allow space for the finishing trim.

2. Install the finishing trim using a nail gun or a suitable adhesive. (Do not use silicone or solvent-based adhesives.)

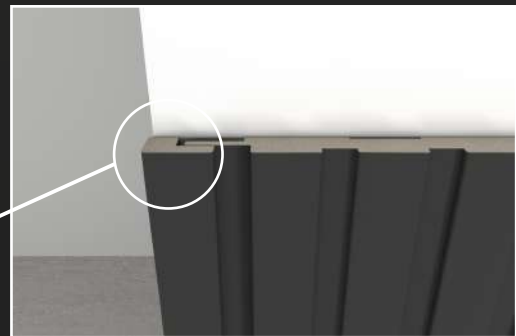

3. Continue installing the panels by connecting them tongue-and-groove. Secure each panel by nailing or clipping the opposite side.

4. For the final panel, complete the installation using the tongue-side finishing trim.



MID-HEIGHT INSTALLATION FINISHING TRIM

FAUS
DECOR



1. Cut the strips to the required length.



2. Once the wall panels are fully installed, fix the mid-height finishing moulding in place using adhesive. (DO NOT use silicone or solvent-based adhesives).

